




An example of the *Deflection Booming, Live Tactic*. Actual deployment should be adjusted for local conditions.

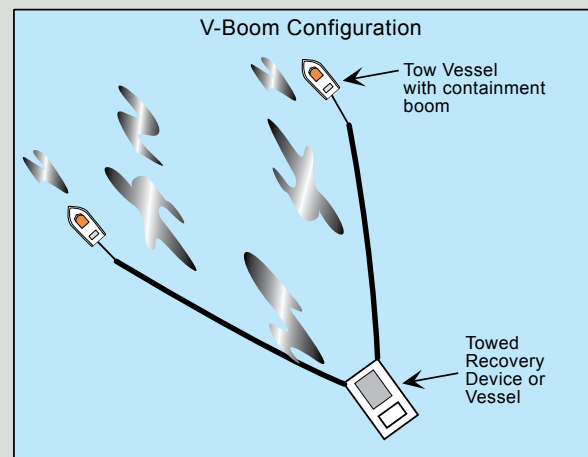

An example of the *Free-oil Recovery Tactic*. Actual deployment should be adjusted for local conditions.

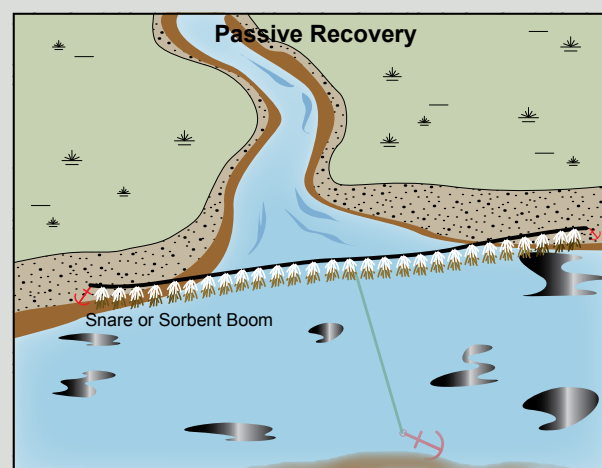

An example of the *Passive Recovery Tactic*. Actual deployment should be adjusted for local conditions.

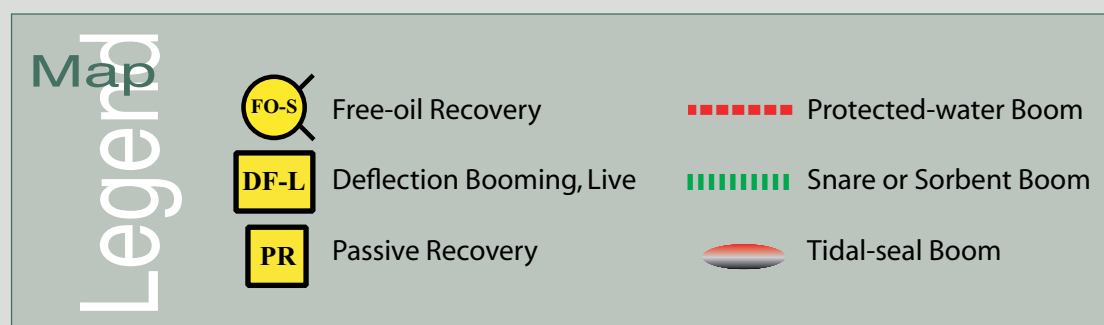


Aerial photography of this area is unavailable at this time, but may be included as it becomes available.

# Geographic Response Strategies for Western Alaska Subarea, Island Zone

## Lookswarat Bay/Jewoak Creek/Anluk Creek, WAK-I04

Center of map at 60° 21.51' N Lat., 166° 22.89' W Lon.

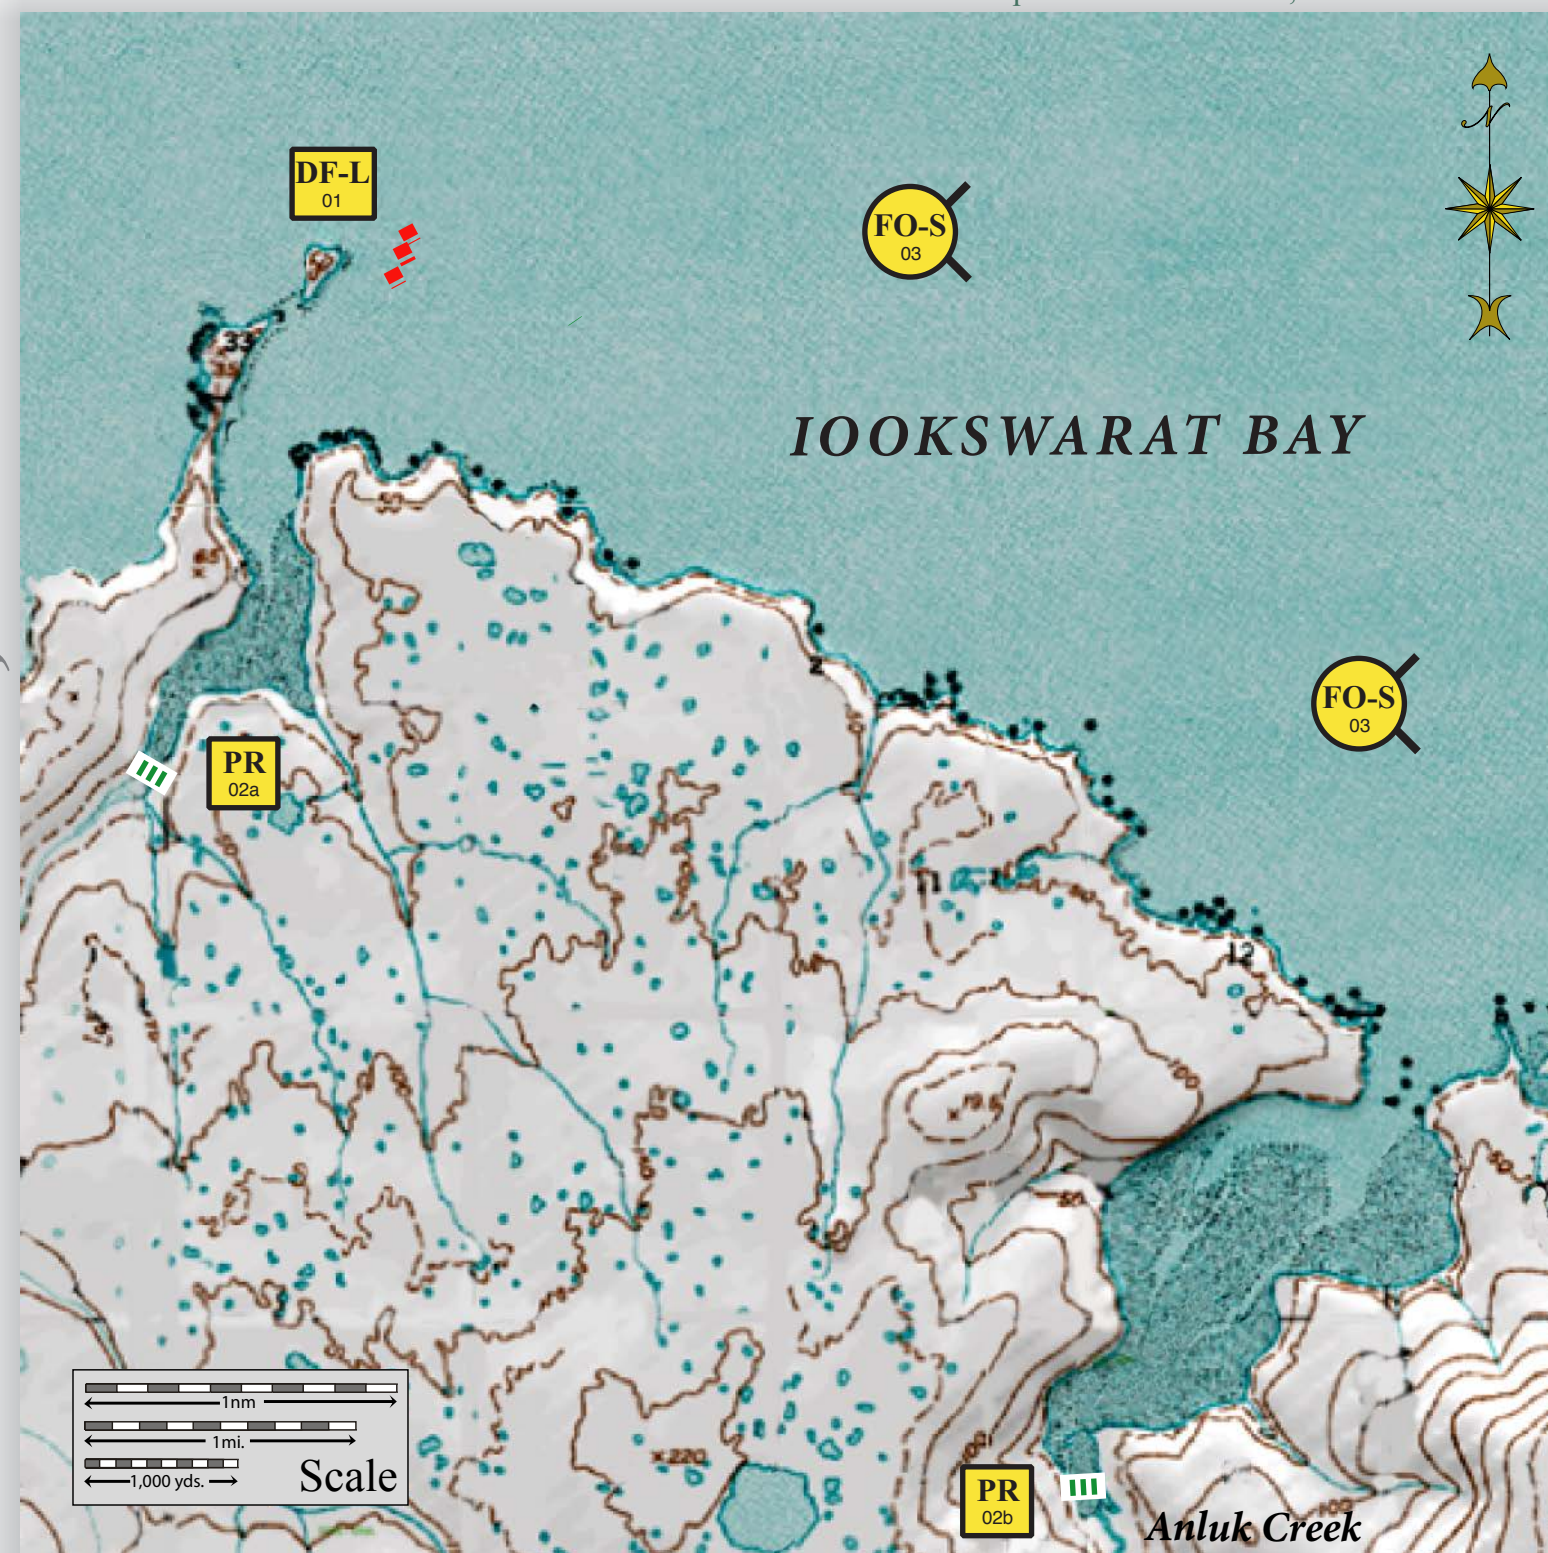

This is not intended for navigational use.

ID	Location and Description	Response Strategy	Implementation	Response Resources	Staging Area	Site Access	Resources Protected (months)	Special Considerations
I-04-01 <div>DF-L</div>	<b>Lookswarat Bay/Anluk Creek</b> Lat. 60° 23.62'N Lon. 166°28.57'W	<b>Deflection-Live</b> Deflect oil that is going to impact the haul outs and rookery Kikartik Rocks area away from the area for free oil collection.	Deploy anchors and boom with skiffs (class 6).  Use aerial surveillance to identify the incoming oil and it's direction. At the location determined by the survey, hold the in place with vessels the 3 sections of 300 ft. protected-water boom in a cascaded pattern in the path of the incoming oil.  Deflect incoming oil out for free oil collection.  Tend throughout the tide.	<b>Deployment Equipment</b> 900 ft. protected-water boom <b>Vessels</b> 6 ea. class 3 1 ea. class 6 <b>Personnel/Shift</b> 20 ea. vessel crew/general techs <b>Tending Vessels</b> 6 ea. class 3 1 ea. class 6 <b>Personnel/Shift</b> 20 ea. vessel crew/general techs	Vessel Platform	Via marine waters  Chart 16006	Fish- intertidal spawning-Arctic char  Marine mammals-seals  Birds-waterfowl, seabird and shorebird nesting  Habitat- exposed rocky shore, marsh, peat shoreline, Exposed wavecut platform, sheltered tidal flats  Human use-subsistence	Vessel master should have local knowledge.  Surveyed: not yet  Tested: not yet
I-04-02 <div>PR</div>	<b>Lookswarat Bay</b> <b>a.</b> Lat. 60° 20.20'N Lon. 166°24.79'W <b>Anluk Creek</b> <b>b.</b> Lat. 60° 21.57'N Lon. 166°12.90'W	<b>Passive Recovery</b> Survey the area prior to deployment. Place passive recovery across entrances to the identified in the back of both bays.	Place and anchor snare line or sorbent boom across the channels of streams/sloughs in both bays.  Replace as necessary to maximize the recovery.	<b>Deployment Equipment</b> <b>500 ft. snare line or sorbent boom</b> 2 ea. small anchor systems 8 ea. anchor stakes (Adjust equipment to reflect survey findings) <b>Vessels/Personnel/Shift</b> Same as I-04-01 <b>Tending Vessels/Personnel/Shift</b> Same as I-04-01	Vessel Platform	Via marine waters  Chart 16006	Same as I-04-01	Vessel master should have local knowledge.  Title 41 permitting required from ADNRR.
I-04-03 <div>FO-S</div>	<b>Lookswarat Bay/Anluk Creek</b> Nearshore waters in the general area of:  Lat. 60° 21.51'N Lon. 166°22.89'W	<b>Free-oil Recovery</b> Maximize free-oil recovery in the offshore & nearshore environment of Lookswarat Bay/Anluk Creek depending on spill location and trajectory.	Deploy free-oil recovery strike teams upwind and up current of the Lookswarat Bay/Anluk Creek.  Use aerial surveillance to locate incoming slicks.	Deploy multiple free-oil recovery strike teams as required to maximize interception of oil before it impacts sensitive areas.	Mekoryuk	Via marine waters  Chart 16006	Same as I-04-01	Vessel master should have local knowledge.  Use extreme caution, shallow waters with shifting channels and bars.

NOTE: Sensitive resource information can be found on other maps which can be accessed through the sensitive area section of the Western Alaska Subarea Contingency Plan: [http://dec.alaska.gov/spar/perp/plans/scp\\_wak.htm](http://dec.alaska.gov/spar/perp/plans/scp_wak.htm).